

Spreader Beams


Authorized Sales & Service
J. HERBERT CORPORATION
 Call 1-800-255-0588
 407-846-0588 Fax: 846-1066
 info@jherbertcorp.com
 Visit us online:
 www.jherbertcorp.com

Model 32 - Adjustable Spreader Beams



Shown with Option C

Specify Top Rigging*

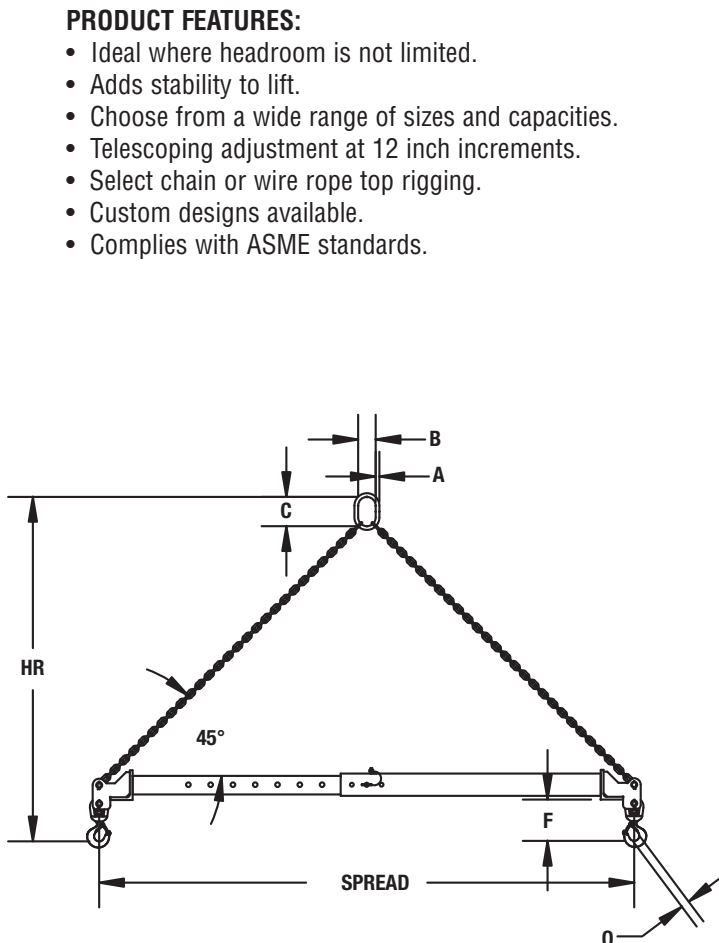

SPECIFICATIONS

Capacity (tons)	Model Number	Spread (ft) Min / Max	Headroom Min/Max (in.)	Beam & Hook Weight (lbs.)	A Oblong Dia (in.)	B Oblong Width (in.)	C Oblong Height (in.)	F - Hook to beam Bottom (in.)	O - Hook Opening w/ latch (in.)	Chain Rigging Weight (lbs)
20	32-20-7/11	7 / 11	93/107	430	1.75	6.0	12.0	14.2	2.27	175
	32-20-9/15	9 / 15	123/144	540						225
	32-20-12/20	12 / 20	151/180	822						275
25	32-25-7/11	7 / 11	98/107	430	2	7.0	14.0	14.2	2.27	240
	32-25-9/15	9 / 15	119/141	540						295
	32-25-12/20	12 / 20	149/179	825						365
30	32-30-7/11	7 / 11	102/115	615	2	7.0	14.0	18.3	3.02	240
	32-30-9/15	9 / 15	124/145	750						295
	32-30-12/20	12 / 20	154/183	1065						365
40	32-40-7/11	7 / 11	105/118	620	2.25	8.0	16.0	18.3	3.02	375
	32-40-9/15	9 / 15	127/148	840						470
	32-40-12/20	12 / 20	154/184	1500						565

TOP RIGGING OPTIONS

OPTION C

Chain top rigging from beam to crane hook with coupler attachment.

OPTION W*

Wire rope top rigging from beam to crane hook.
 *Wire Rope Top Rigging requires a lug, please specify if you will be attaching to wire rope top rigging, even when not ordering the top rigging with your beam.